



Starting System/Ignition System/Fuel System

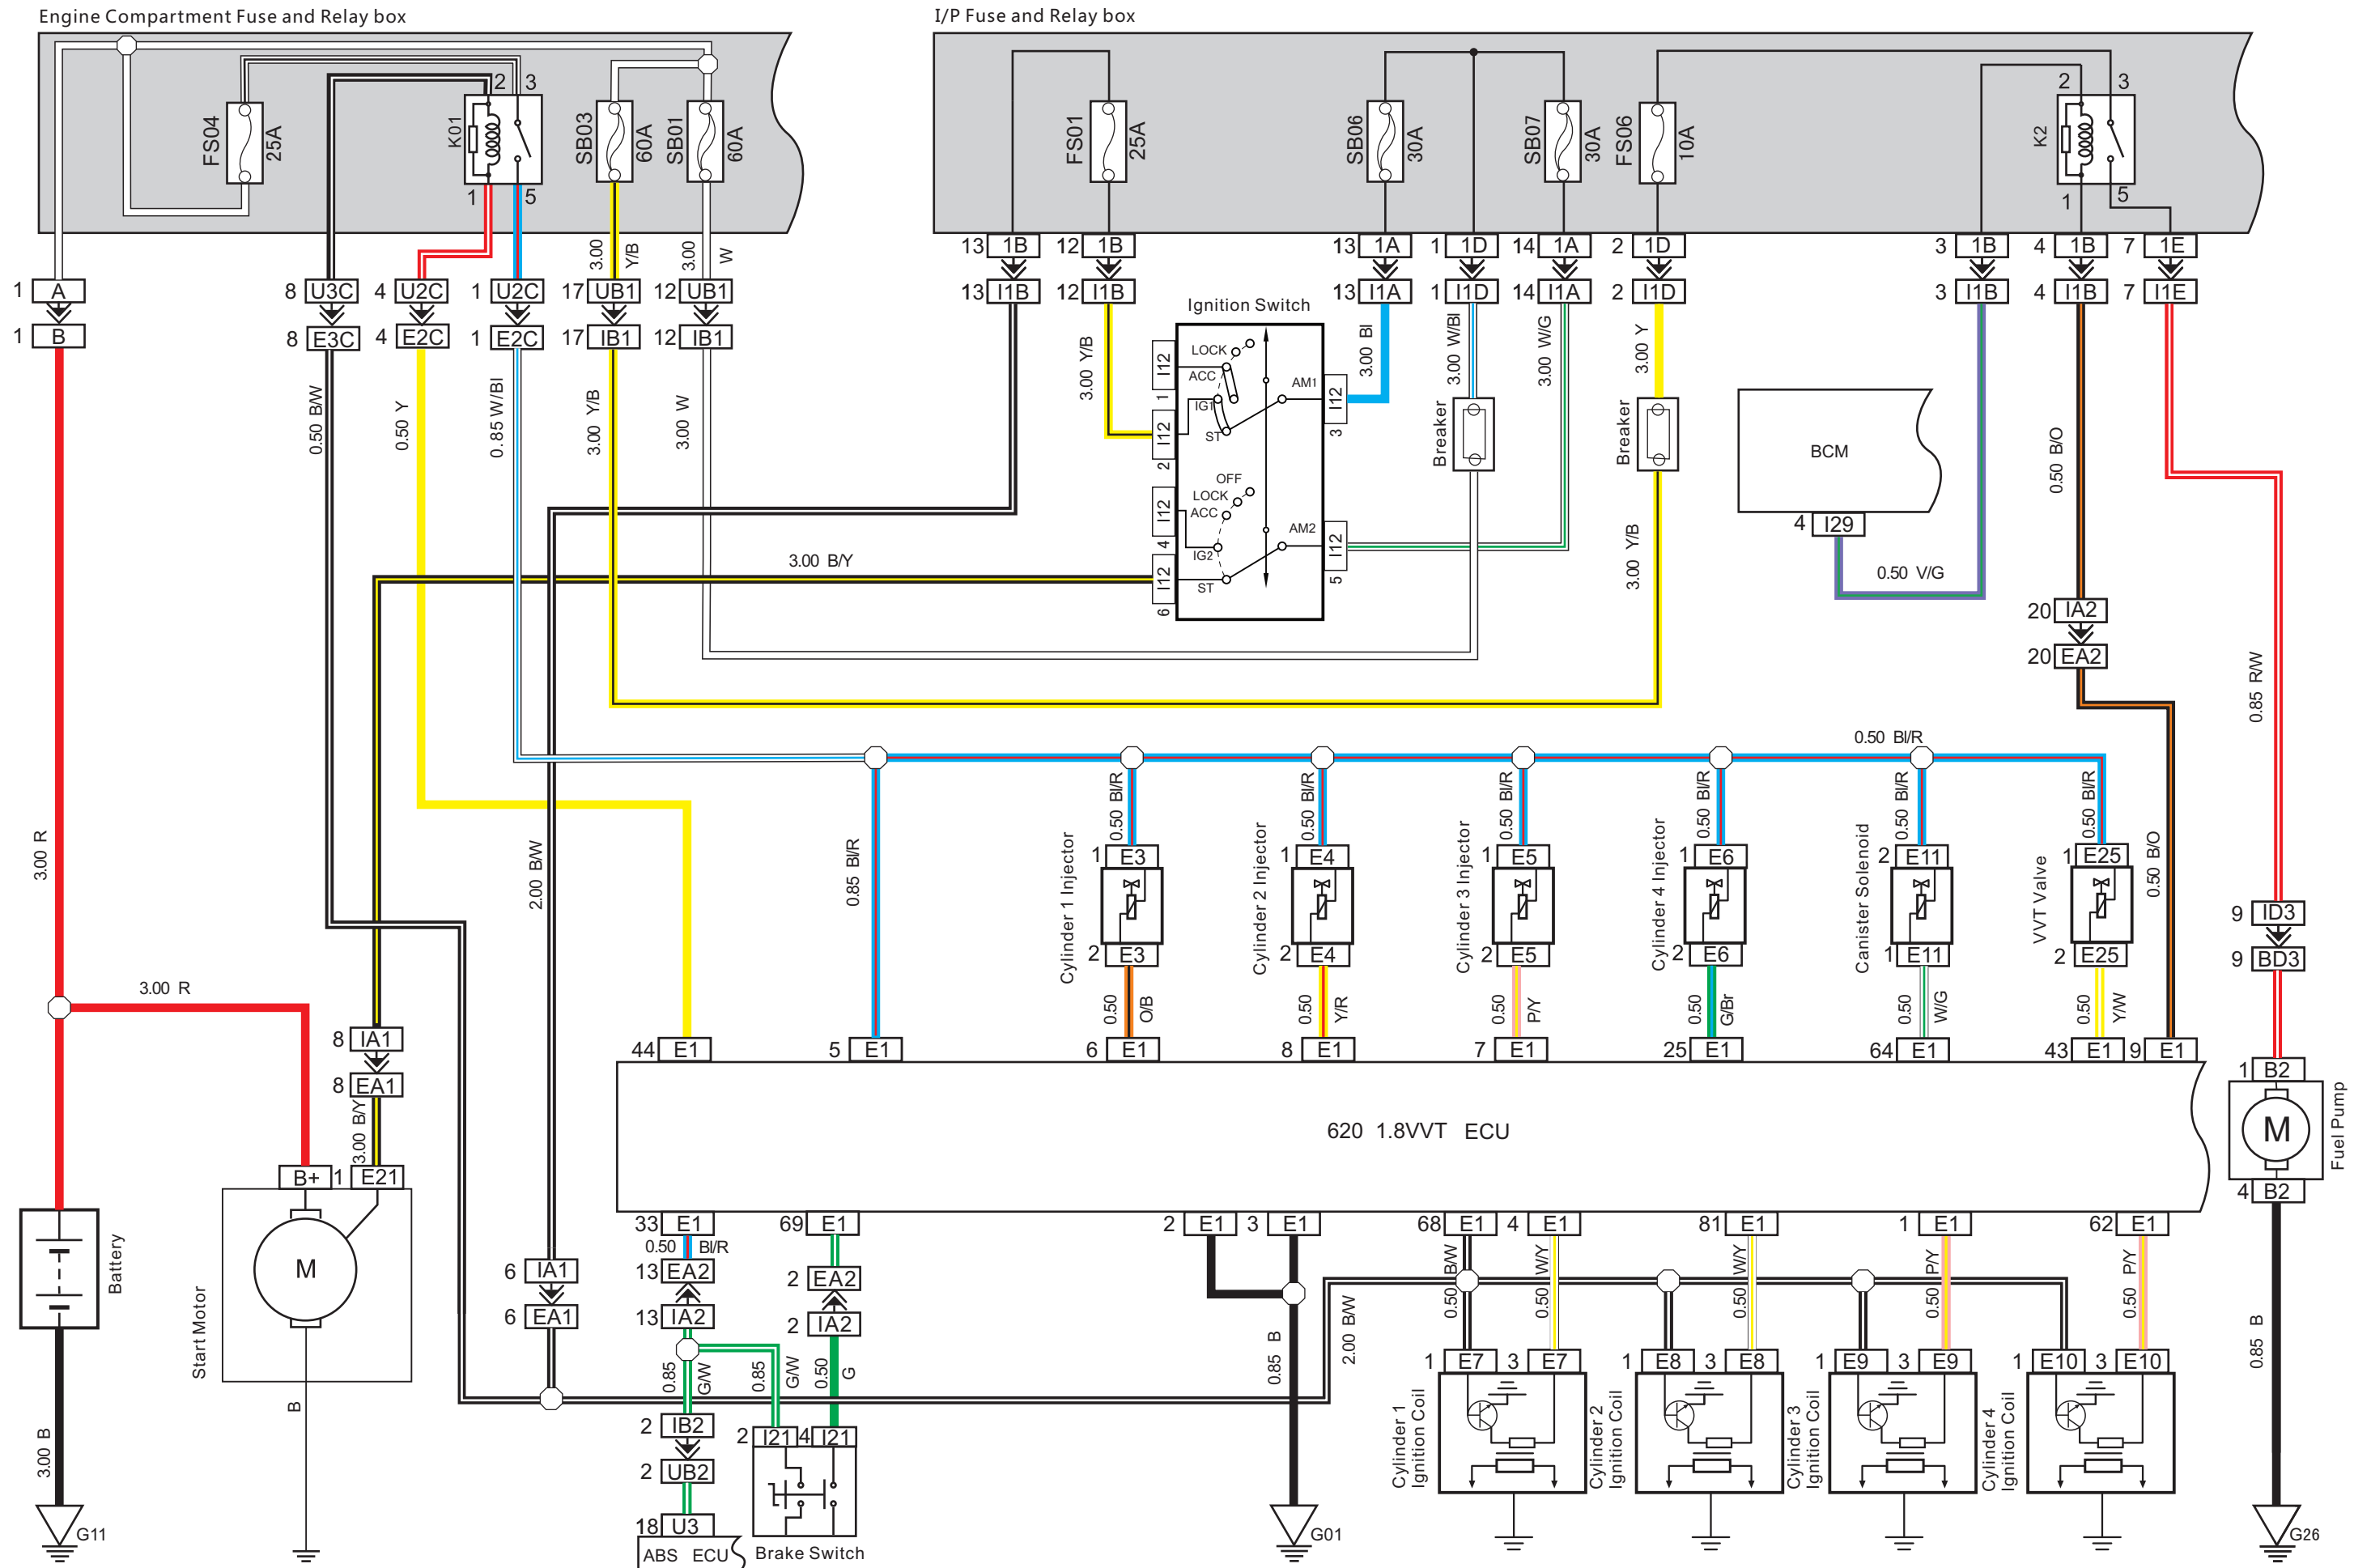


LIFAN 620

Electronic Control System

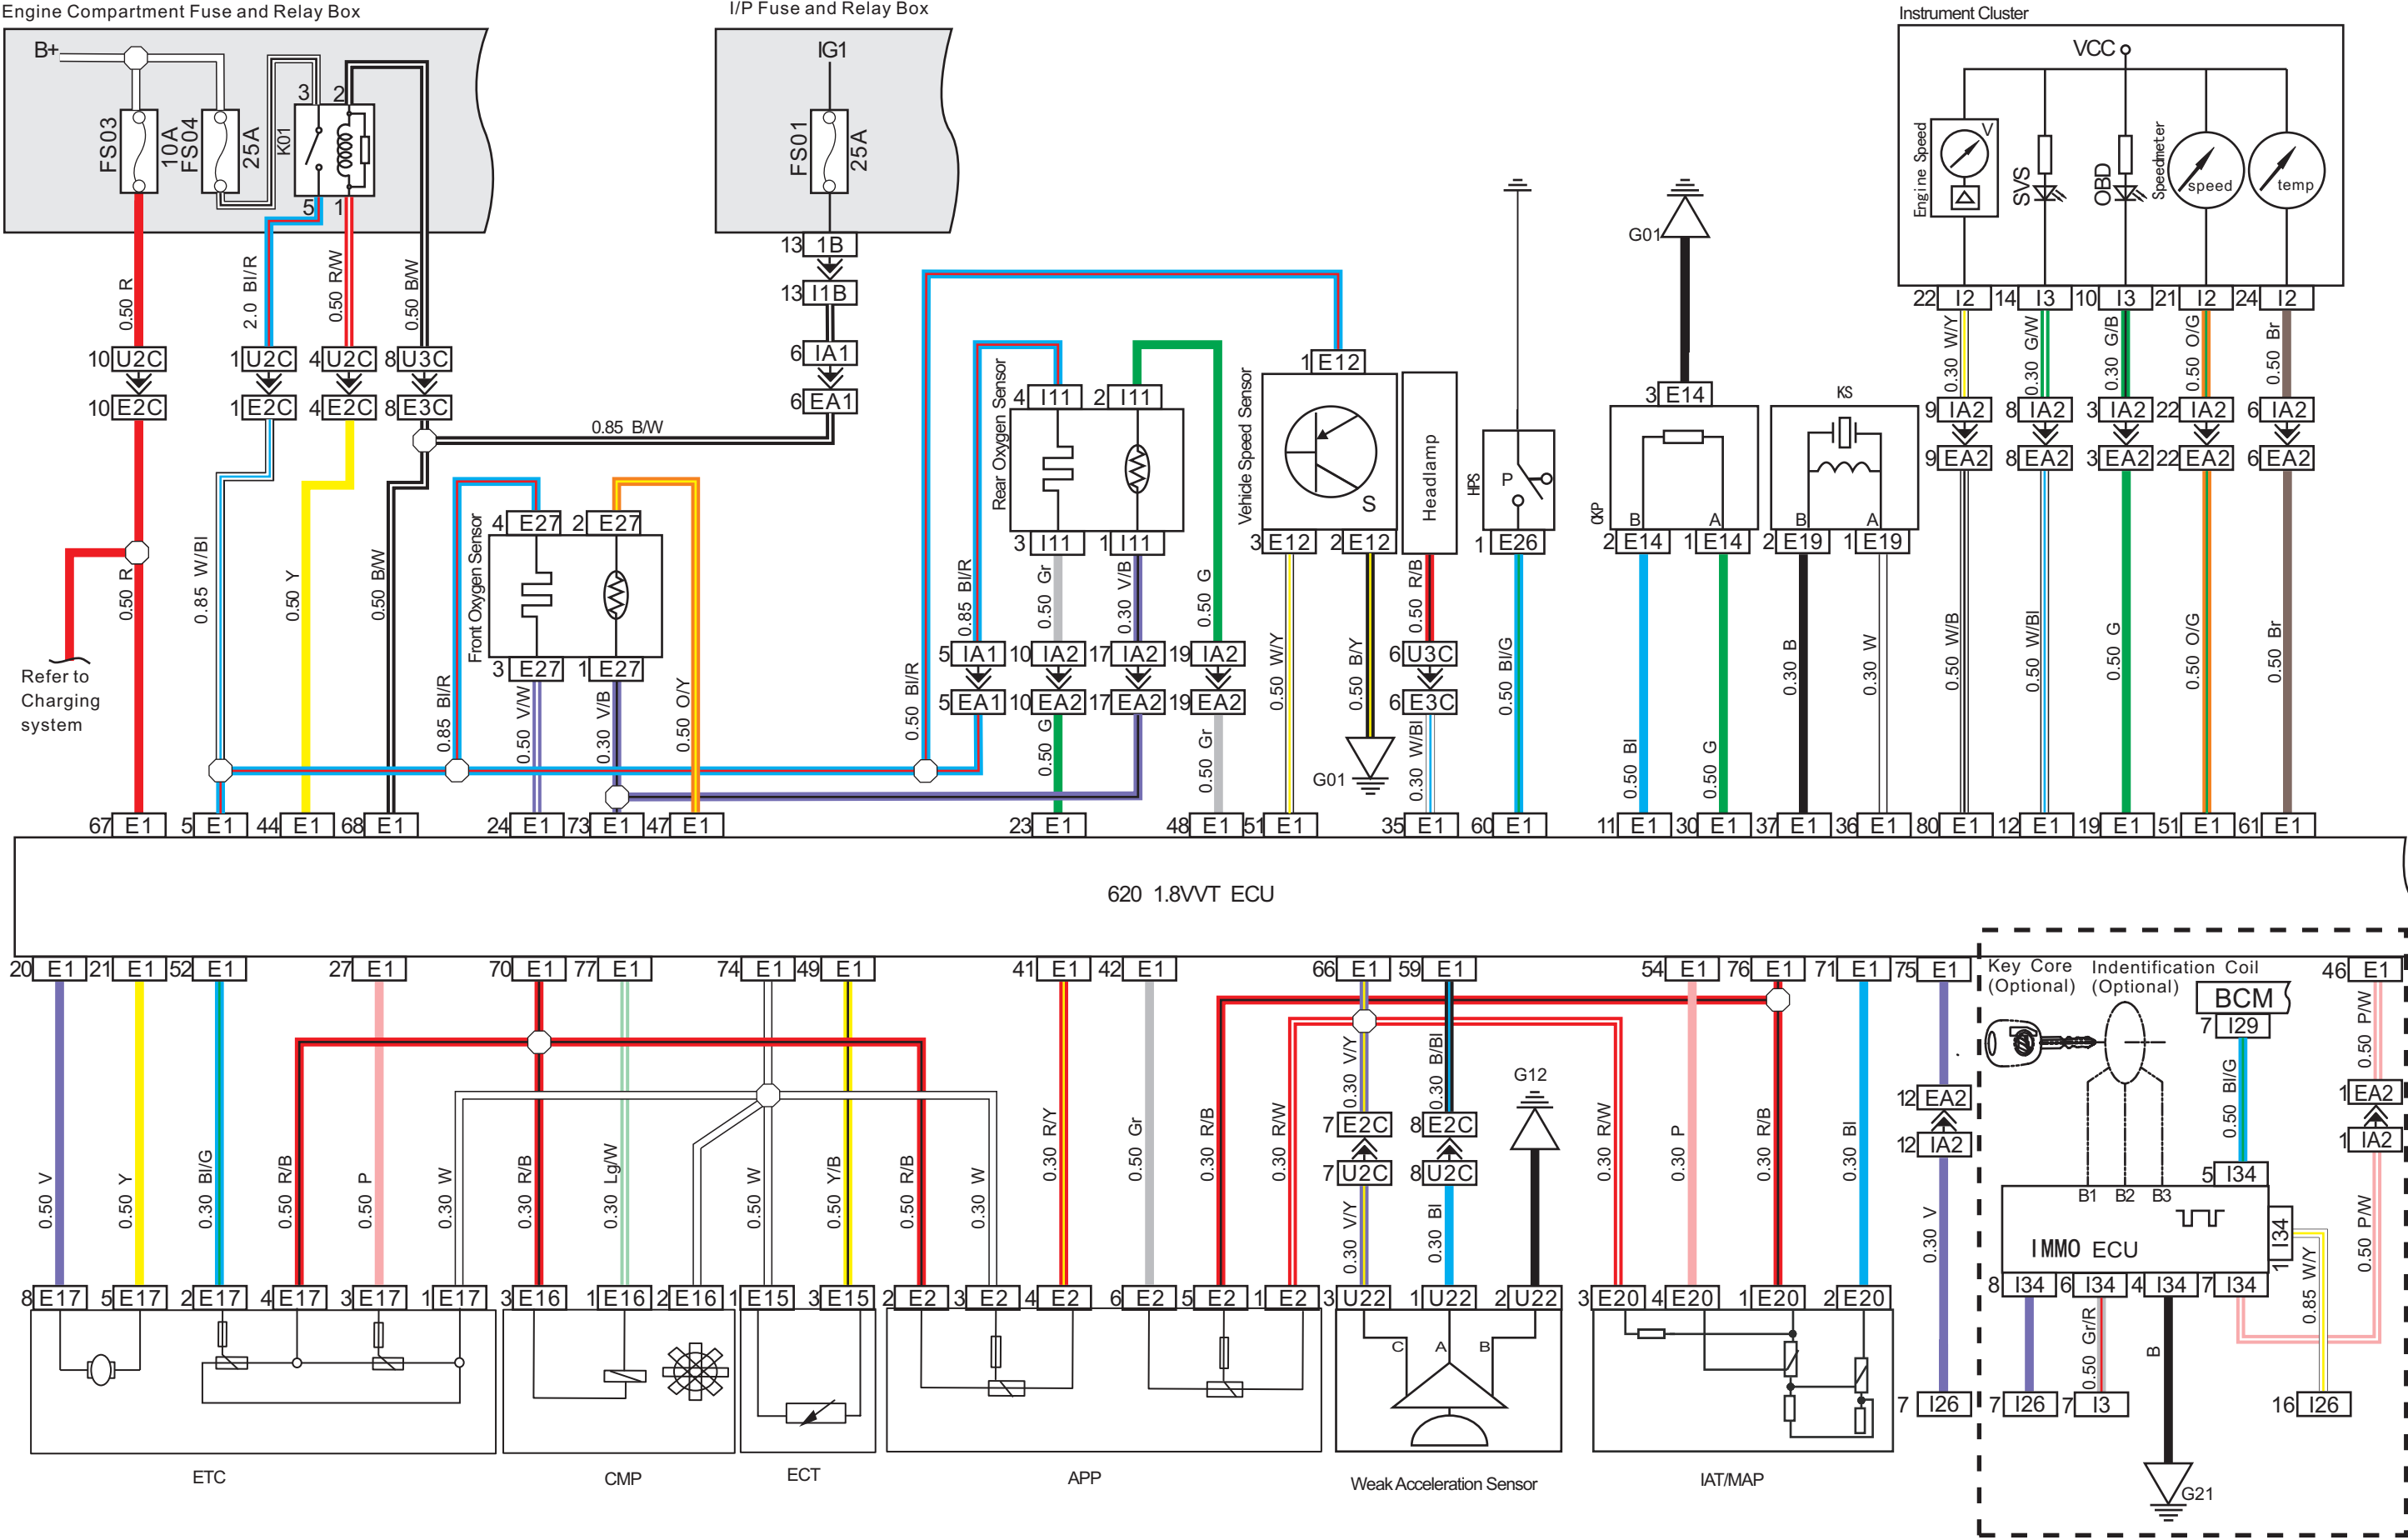

LIFAN 620

Fuse and Relay

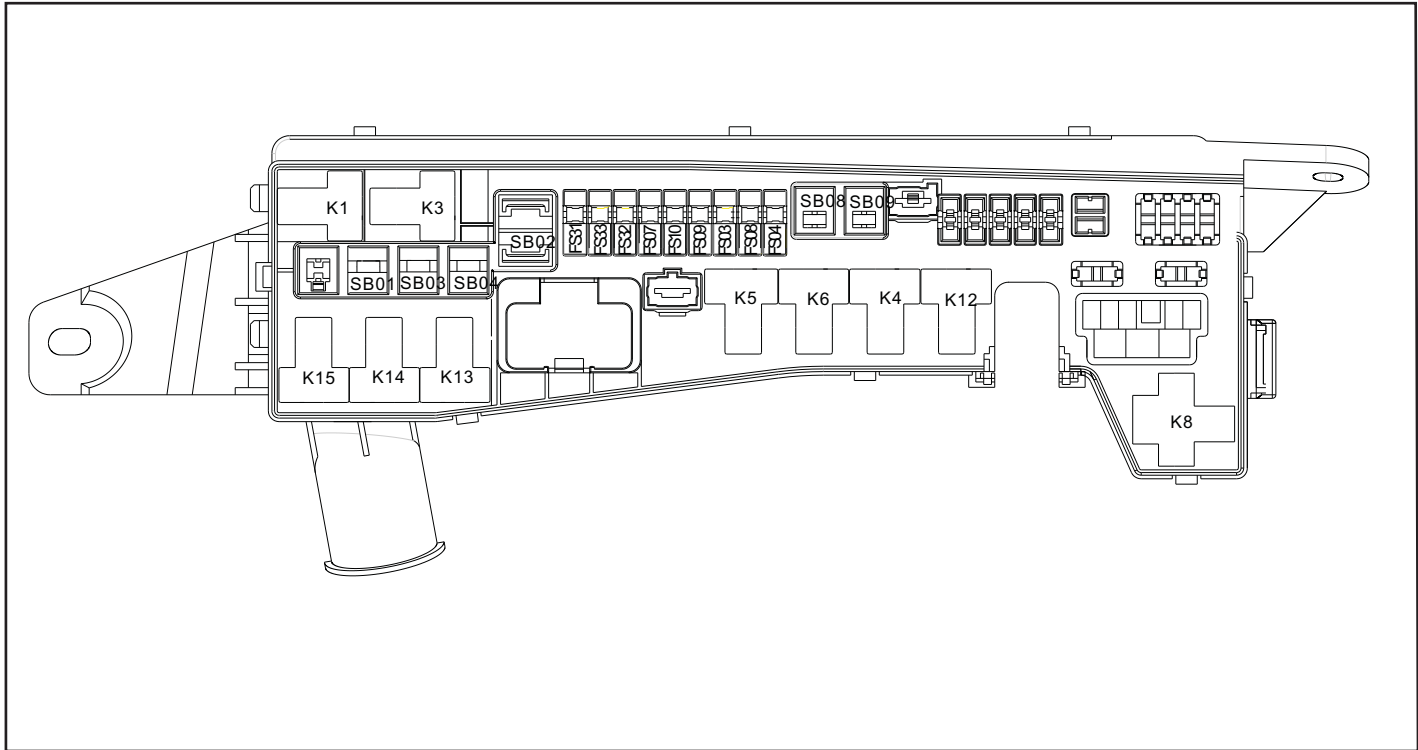


Relay

Code	Application	description
K1	Main relay	
K3	ACC	
K4	Hi-speed relay	
K5	Speed regulation	
K6	Fan Low Speed	
K8	Blower	
K12	FR fog	
K13	Overtaking Lamp	
K14	High Beam	
K15	Low Beam	

Fuse


Code	Application	Rated Current(A)	Description
SB01	Dashboard box	60	
SB02	B Terminal	100	
SB03	ACCY PWR	60	
SB04	Blower	40	
SB08	ABS	30	
SB09	ABS	30	
FS03	Engine ECU	10	
FS04	Main Relay	25	
FS07	Control Fan	5	
FS08	ACC	10	
FS09	HI_SPD Fan	35	
FS10	LW_SPD Fan	35	
FS31	FR Fog	15	
FS32	HI Beam	15	
FS33	LW Beam	15	

Fuse and Relay

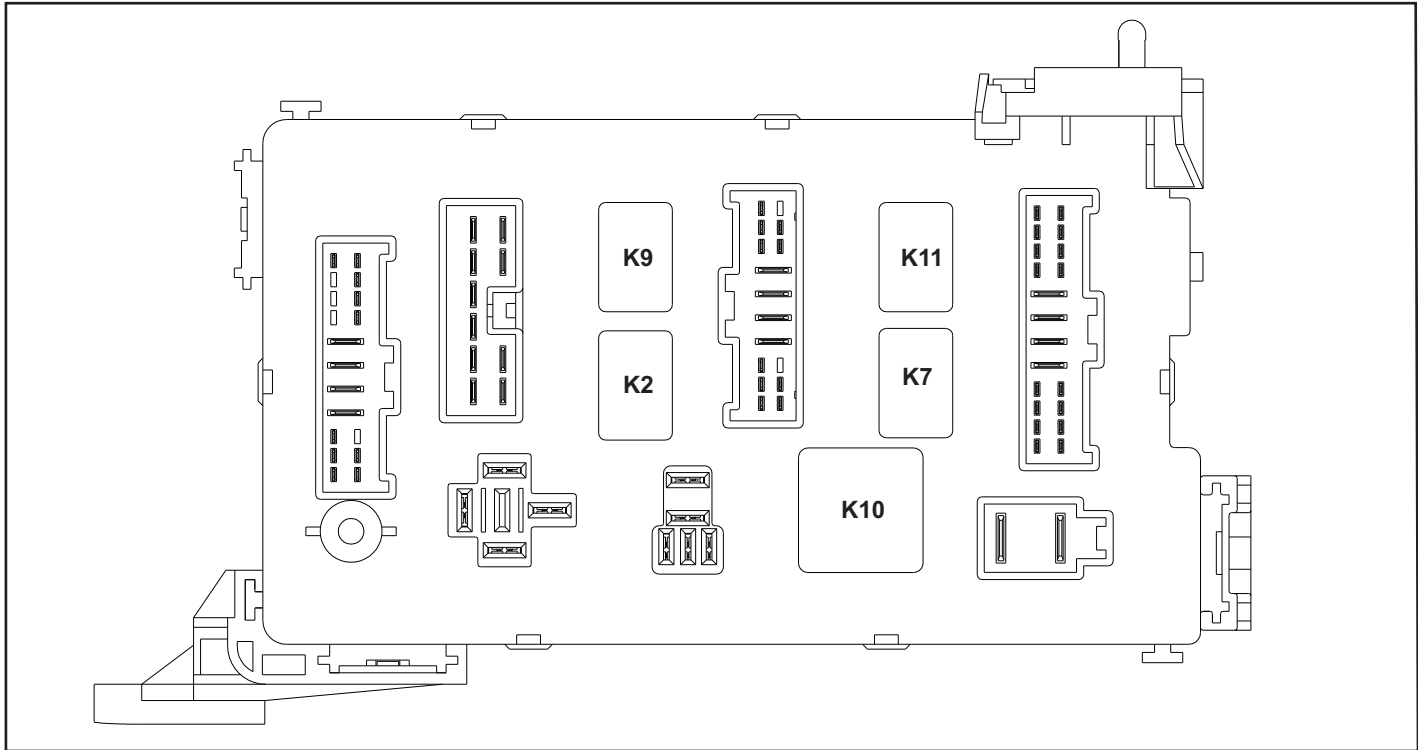

Relay


Code	Application	Description
K2	Fuel pump relay	
K7	Rear defroster relay	
K9	Horn relay	
K10	ACC relay	
K11	Rear fog lamp relay	

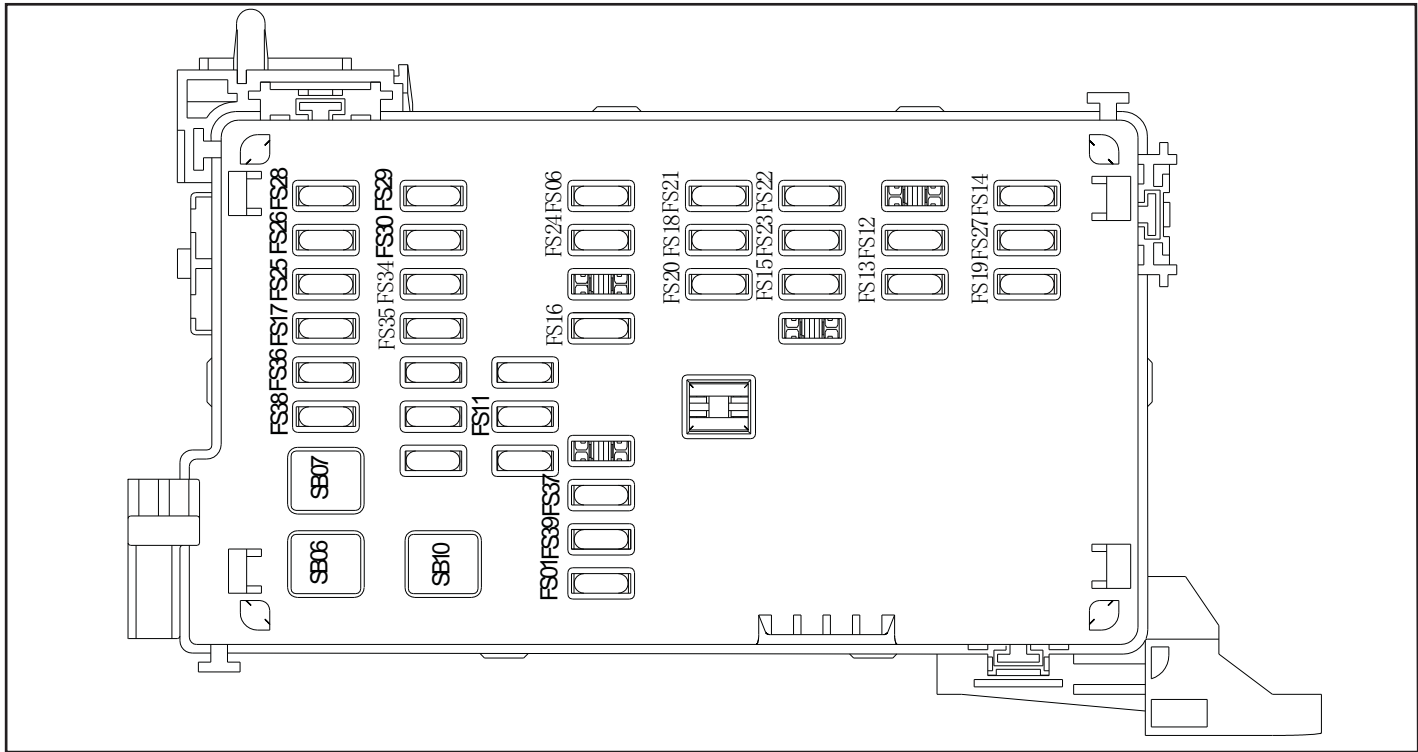

Fuse

Code	Application	Rated Current(A)	description
SB06	IGN AM1	30	
SB07	IGN AM2	30	
SB10	RR DEFOG	30	
FS01	ALT/Ignition coil	25	
FS06	Fuel pump	10	
FS11	CVT power	10	
FS12	Reverse lamp	10	
FS13	Stop lamp	5	
FS14	ABS Control	10	
FS15	A/C controller	10	
FS16	A/C controller B+	5	
FS17	Room lamp/IG SW lighting	10	
FS18	Horn	15	
FS19	SRS	10	
FS20	Outer rearview mirror	10	
FS21	Wiper	15	
FS22	CIG	15	
FS23	V/A power	5	

Fuse and Relay

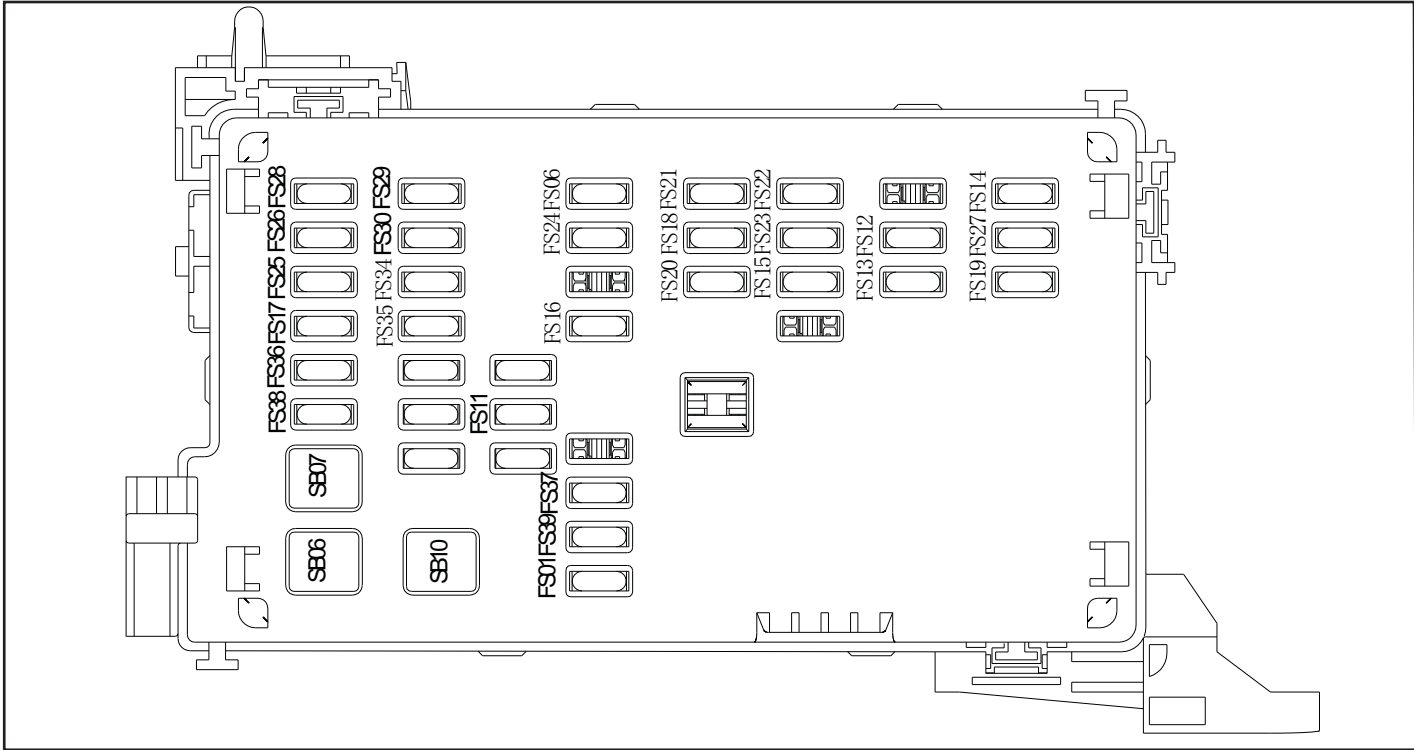

Fuse

Code	Application	Rated Current(A)	description
FS24	V/A Power/Diagnostic	15	
FS25	Door lamp/LUG lamp	5	
FS26	BCM power B+	5	
FS27	BCM control	5	
FS28	Concentrated control lock power	10	
FS29	Turn lamp/Harzard lamp	15	
FS30	RR fog	5	
FS34	Position lamp	10	
FS35	Power window	30	
FS36	COMB. instrument B+	10	
FS37	COMB. Instrument IGN/Diagnostic	5	
FS38	Sunroof power	15	
FS39	Driver seat heater	15	